


Bump Head cutter line refilling for bent shaft line trimmer



Turn machine off and clean excess grass and dirt from head.
Note: Removal of the head is not necessary.



Push in **locating tabs** on both sides of the head.

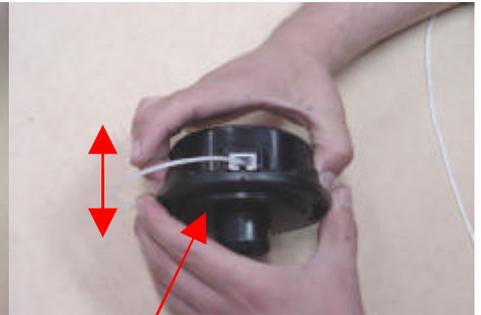

While pushing in the tabs, pull the **cover** away from the body of the head.



Remove cover.




Remove **spool**.


Note: Take care not to loose the spring that is located behind the spool.



With approximately 3 meters of cord, double over and hold at the loop.

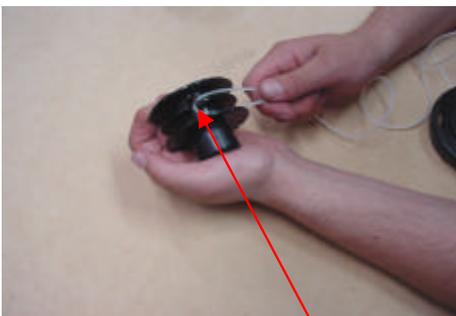

Hold the spool firm and lock the end of the cord in the **cut out** in the middle of the guides.

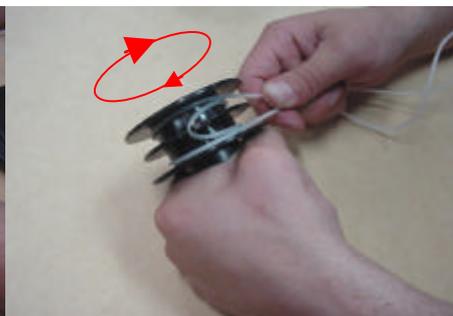

Wrap the cord **CLOCK WAYS** (while looking at the front of the head). **Note:** Try not to overlap the cord while refilling as this may cause it to jam while in use.



Wrap cord on spool until you have about 10-15 Cm left loose.




Lock loose ends into the **cut outs** on the front of the spool.

Note: There is a cut out on either side of the spool for each end of nylon cord.



With the spool refilled and the ends of the cord locked into the cut outs in the spool, check that the spring is correctly positioned in the cutter head body.

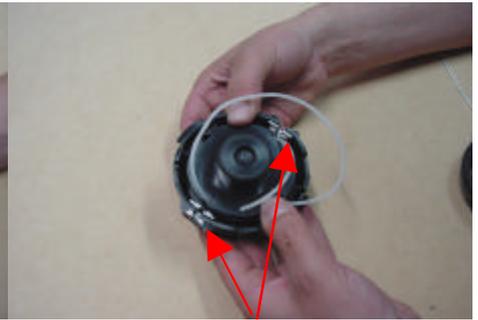

Place the spool into the body of the head while lining up the cut outs with the **eyelets** in the body.



Pull the cord out of the cut outs and bring them back into the eyelets.



Hold the cord back and line the tabs on the body up with the holes on the cover.



Lightly push in the **tabs** to assemble.



Before use, check the cutter head over and make sure it has been assembled correctly.

Note: If the line is not coming out after refilling make sure it has been wound on the correct way and that it is not twisted.

