




**OWNER'S MANUAL
USO E MANUTENZIONE
MANUAL DEL PROPIETARIO**

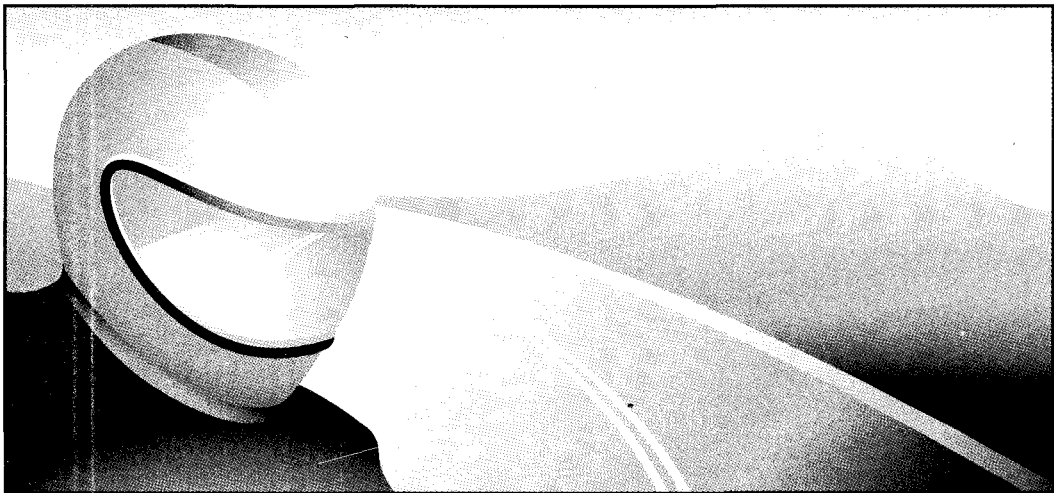

**FJS600 D/A
SILVER WING**

**Honda FJS600 D/A
SILVER WING**

OWNER'S MANUAL

USO E MANUTENZIONE

MANUAL DEL PROPIETARIO

IMPORTANT INFORMATION

- **OPERATOR AND PASSENGER**

This scooter is designed to carry the operator and one passenger. Never exceed the maximum weight capacity as shown on the accessories and loading label.

- **ON-ROAD USE**


This scooter is designed to be used only on the road.

- **READ THIS OWNER'S MANUAL CAREFULLY**

Pay special attention to the safety messages that appear throughout the manual. These messages are fully explained in the "A Few Words About Safety" section which appears before the Contents page.

This manual should be considered a permanent part of the scooter and should remain with the scooter when resold.

**Honda FJS600 D/A
SILVER WING
OWNER'S MANUAL**

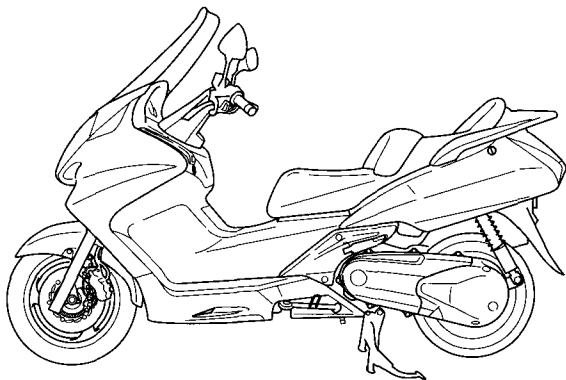

All information in this publication is based on the latest production information available at the time of approval for printing. Honda Motor Co.,Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

WELCOME

The scooter presents you a challenge to master the machine, a challenge to adventure. You ride through the wind, linked to the road by a vehicle that responds to your commands as no other does. Unlike an automobile, there is no metal cage around you. Like an airplane, a pre-ride inspection and regular maintenance are essential to your safety. Your reward is freedom.

To meet the challenges safely, and to enjoy the adventure fully, you should become thoroughly familiar with this owner's manual **BEFORE YOU RIDE THE SCOOTER**.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your scooter, other property, or the environment.

When service is required, remember that your Honda dealer knows your scooter best. If you have the required mechanical "know-how" and tools, your dealer can supply you with an Official Honda Shop Manual to help you perform many maintenance and repair tasks.

Pleasant riding, and thank you for choosing a Honda !

- The following codes in this manual indicate each country.
- The illustrations herein are based on the FJS600A type.

E	UK			
F	France	Belgium		
EK	Hong Kong	New Zealand	South Africa	
	Ireland	Singapore		
ED	European direct sales			
	Austria	Greece	Macedonia	Spain
	Belgium	Holland	Norway	Sweden
	Bulgaria	Hungary	Poland	Switzerland
	Croatia	Iceland	Portugal	Ukraine
	Czech	Israel	Romania	
	Denmark	Italy	Russia	
	Finland	Latvia	Slovakia	
	Germany	Luxembourg	Slovenia	

- The specifications may vary with each locale.


A FEW WORDS ABOUT SAFETY

Your safety, and the safety of others, is very important. And operating this scooter safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a scooter. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- **Safety Labels** — on the scooter.
- **Safety Messages** — preceded by a safety alert symbol  and one of three signal words: **DANGER, WARNING, or CAUTION.**

These signal words mean:

⚠ DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ CAUTION

You **CAN** be **HURT** if you don't follow instructions.

- **Safety Headings** — such as Important Safety Reminders or Important Safety Precautions.
- **Safety Section** — such as Scooter Safety.
- **Instructions** — how to use this scooter correctly and safely.

This entire manual is filled with important safety information — please read it carefully.

OPERATION

page

1 SCOOTER SAFETY

- 1 IMPORTANT SAFETY INFORMATION
- 2 PROTECTIVE APPAREL
- 5 LOAD LIMITS AND GUIDELINES
- 10 IMAGE LABELS

15 PARTS LOCATION

- 18 INSTRUMENTS AND INDICATORS

32 MAJOR COMPONENTS

(Information you need to operate this scooter)

- 32 SUSPENSION
- 33 BRAKES
- 38 COOLANT
- 40 FUEL
- 44 ENGINE OIL
- 45 TUBELESS TYRES

page

51 ESSENTIAL INDIVIDUAL COMPONENTS

- 51 IGNITION SWITCH
- 52 KEYS
- 54 IMMOBILIZER SYSTEM (HISS)
- 57 RIGHT HANDLEBAR CONTROLS
- 58 LEFT HANDLEBAR CONTROLS

page

59 FEATURES

(Not required for operation)

- 59 STEERING LOCK
- 60 PARKING BRAKE
- 61 SEAT LOCK
- 62 ADJUSTABLE BACKREST
- 63 HELMET HOLDER
- 64 CENTER COMPARTMENT
- 65 DOCUMENT BAG
- 65 TRUNK LIGHT
- 66 RIGHT COMPARTMENT
- 67 LEFT COMPARTMENT
- 68 ACCESSORY SOCKET
- 69 HEADLIGHT AIM VERTICAL
ADJUSTMENT

page

70 OPERATION

- 70 PRE-RIDE INSPECTION
- 72 STARTING THE ENGINE
- 78 RUNNING-IN
- 79 RIDING
- 87 PARKING
- 88 ANTI-THEFT TIPS

MAINTENANCE

page

89 MAINTENANCE

- 89 THE IMPORTANCE OF MAINTENANCE
- 90 MAINTENANCE SAFETY
- 91 SAFETY PRECAUTIONS
- 92 MAINTENANCE SCHEDULE
- 95 TOOL KIT
- 96 SERIAL NUMBERS
- 97 COLOUR LABEL
- 98 AIR CLEANER
- 101 CRANKCASE BREATHER
- 102 ENGINE OIL
- 109 SPARK PLUGS
- 112 THROTTLE OPERATION
- 113 IDLE SPEED
- 114 COOLANT
- 115 FRONT AND REAR SUSPENSION INSPECTION
- 116 SIDE STAND
- 117 BRAKE PAD WEAR
- 119 BRAKE LOCK OPERATION
- 120 BATTERY
- 122 FUSE REPLACEMENT

page

- 126 BULB REPLACEMENT

133 CLEANING

138 STORAGE GUIDE

- 138 STORAGE
- 140 REMOVAL FROM STORAGE

141 SPECIFICATIONS

145 CATALYTIC CONVERTER

SCOOTER SAFETY

IMPORTANT SAFETY INFORMATION

Your scooter can provide many years of service and pleasure — if you take responsibility for your own safety and understand the challenges that you can meet on the road.

There is much that you can do to protect yourself when you ride. You'll find many helpful recommendations throughout this manual. Following are a few that we consider to be most important.

Always Wear a Helmet

It's a proven fact: helmets significantly reduce the number and severity of head injuries. So always wear an approved motorcycle helmet and make sure your passenger does the same. We also recommend that you wear eye protection, sturdy boots, gloves, and other protective gear (page 2).

Make Yourself Easy to See

Some drivers do not see scooters because they are not looking for them. To make yourself more visible, wear bright reflective clothing, position yourself so other drivers can see you, signal before turning or changing lanes, and use your horn when it will help others notice you.

Ride Within Your Limits

Pushing the limits is another major cause of scooter crashes. Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, fatigue and inattention can significantly reduce your ability to make good judgements and ride safely.

Don't Drink and Ride

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and ride, and don't let your friends drink and ride either.

Keep Your Bike in Safe Condition

For safe riding, it's important to inspect your scooter before every ride and perform all recommended maintenance. Never exceed load limits, and only use accessories that have been approved by Honda for this scooter. See page 5 for more details.

PROTECTIVE APPAREL

For your safety, we strongly recommend that you always wear an approved motorcycle helmet, eye protection, boots, gloves, trousers, and a long-sleeved shirt or jacket whenever you ride. Although complete protection is not possible, wearing proper gear can reduce the chance of injury when you ride.

Following are suggestions to help you choose proper gear.

⚠ WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you and your passenger always wear a helmet, eye protection and other protective apparel when you ride.

Helmets and Eye Protection

Your helmet is your most important piece of riding gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely. A bright-coloured helmet can make you more noticeable in traffic, as can reflective strips.

An open-face helmet offers some protection, but a full-face helmet offers more. Always wear a face shield or goggles to protect your eyes and help your vision.

Additional Riding Gear

In addition to a helmet and eye protection, we also recommend:


- Sturdy boots with non-slip soles to help protect your feet and ankles.
- Leather gloves to keep your hands warm and help prevent blisters, cuts, burns and bruises.
- A motorcycle riding suit or jacket for comfort as well as protection. Bright-coloured and reflective clothing can help make you more noticeable in traffic. Be sure to avoid loose clothes that could get caught on any part of your scooter.

ALWAYS wear a helmet.
You should also wear a face shield or goggles.

Wear bright or reflective clothing.

Clothes should be close-fitting.

Wear gloves.

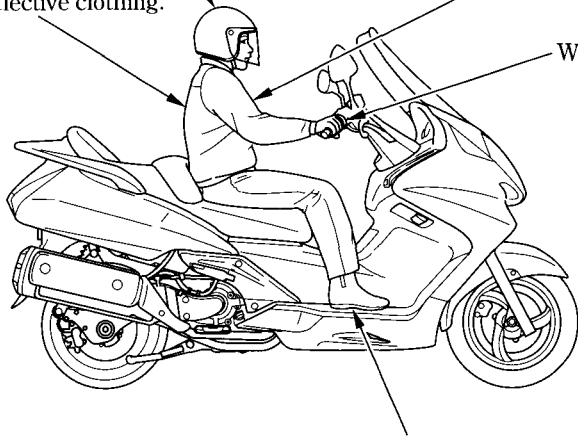

Shoes should be close-fitting, have low heels and offer ankle protection.

LOAD LIMITS AND GUIDELINES

Your scooter has been designed to carry you, one passenger and a limited amount of cargo. When you add cargo or carry a passenger, you may feel some difference during acceleration and braking. But so long as you keep your scooter well-maintained, with good tyres and brakes, you can safely carry loads within the given limits and guidelines.

However, exceeding the weight limit or carrying an unbalanced load can seriously affect your scooter's handling, braking and stability. Non-Honda accessories, improper modifications, and poor maintenance can also reduce your safety margin.

The following pages give more specific information on loading, accessories and modifications.

Loading

How much weight you put on your scooter, and how you load it, are important to your safety. Anytime you ride with a passenger or cargo you should be aware of the following information.

⚠ WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Load Limits

Following are the load limits for your scooter:

Maximum weight capacity:

178 kg (392 lb)

Includes the weight of the rider, passenger, all cargo and all accessories

Maximum cargo weight:

17 kg (37 lb)

The weight of added accessories will reduce the maximum cargo weight you can carry.

Putting too much weight in individual storage compartments can also affect stability and handling. So be sure to stay within the limits given below:


Maximum weight:

in center compartment	10 kg (22 lb)
in right compartment	0.5 kg (1.1 lb)
in left compartment	1.0 kg (2.0 lb)

Center compartment:
weight limit:
10 kg (22 lb)

Left compartment:
weight limit:
1.0 kg (2.0 lb)

Right compartment:
weight limit:
0.5 kg (1.1 lb)

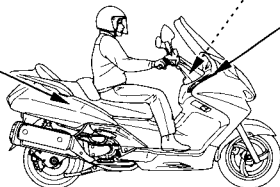

Loading Guidelines

Your scooter is primarily intended for transporting you and a passenger.

If you wish to carry more cargo, check with your Honda dealer for advice, and be sure to read the information regarding accessories on page 8.

Improperly loading your scooter can affect its stability and handling. Even if your scooter is properly loaded, you should ride at reduced speeds whenever carrying cargo.

Follow these guidelines whenever you carry a passenger or cargo:

- Check that both tyres are properly inflated (page 45).
- If you change your normal load, you may need to adjust the rear suspension (page 32).
- To prevent loose items from creating a hazard, make sure the center compartment, right compartment and left compartment are closed and that any other cargo is securely tied down before you ride away.
- Place cargo weight as close to the center of the scooter as possible.
- Balance cargo weight evenly on both sides.

Accessories and Modifications

Modifying your scooter or using non-Honda accessories can make your scooter unsafe. Before you consider making any modifications or adding an accessory, be sure to read the following information.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Accessories

We strongly recommend that you use only Honda Genuine Accessories that have been specifically designed and tested for your scooter. Because Honda cannot test all other accessories, you must be personally responsible for proper selection, installation and use of non-Honda accessories. Check with your dealer for assistance and always follow these guidelines:

- Make sure the accessory does not obscure any lights, reduce ground clearance and banking angle, limit suspension travel or steering travel, alter your riding position or interfere with operating any controls.
- Be sure electrical equipment does not exceed the scooter's electrical system capacity (page 144). A blown fuse can cause a loss of lights or engine power.

- Do not pull a trailer or sidecar with your scooter. This scooter was not designed for these attachments, and their use can seriously impair your scooter's handling.

Modifications

We strongly advise you not to remove any original equipment or modify your scooter in any way that would change its design or operation. Such changes could seriously impair your scooter's handling, stability and braking, making it unsafe to ride.






Removing or modifying your lights, mufflers, emission control system or other equipment can also make your scooter illegal.

IMAGE LABELS

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.

	Read instructions contained in Owner's Manual carefully.
	Read instructions contained in Shop Manual carefully. In the interest of safety, take the motorcycle to be serviced only by a Honda dealer.
	DANGER (with RED background) You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.
	WARNING (with ORANGE background) You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
	CAUTION (with YELLOW background) You CAN be HURT if you don't follow instructions.




RADIATOR CAP LABEL

DANGER

NEVER OPEN WHEN HOT.

Hot coolant will scald you.



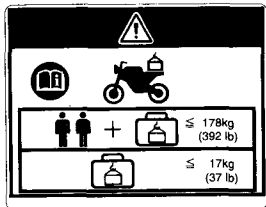



Relief pressure valve begins to open at 1.1 kgf/cm².



ACCESSORIES AND LOADING WARNING LABEL WARNING

ACCESSORIES AND LOADING

- The safety stability and handling of this motorcycle may be affected by the addition of accessories and luggage.
- Read carefully the instructions contained in user's manual and installation guide before installing any accessory.
- The total weight of accessories and luggage added to rider's and passenger's weight should not exceed 178 kg (392 lb), which is the maximum weight capacity.
- The luggage weight must not exceed 17 kg (37 lb) under any circumstances.
- The fitting of large fork-mounted or large handlebar-mounted fairing is not recommended.

			200	225
	kPa		200	250
	120/80-14M/C 58S			
	BRIDGESTONE:HOOP B03			
	IRC: SS530F			
	150/70-13M/C 64S			
	BRIDGESTONE:HOOP B02			
	IRC: SS530R			

TYRE INFORMATION LABEL

Cold tyre pressure:

[Driver only]

Front 200 kPa (2.00 kgf/cm², 29 psi)

Rear 225 kPa (2.25 kgf/cm², 33 psi)

[Driver and passenger]

Front 200 kPa (2.00 kgf/cm², 29 psi)

Rear 250 kPa (2.50 kgf/cm², 36 psi)

Tyre size:

Front 120/80 – 14M/C 58S

Rear 150/70 – 13M/C 64S

Tyre brand: BRIDGESTONE




Front HOOP B03

Rear HOOP B02

Tyre brand: IRC

Front SS530F

Rear SS530R

	<p>SAFETY REMINDER LABEL For your protection, always wear helmet and protective gear. FUEL LABEL UNLEAD FUEL ONLY</p>
 <p>≤ 10kg (22 lb)</p>	<p>CARGO LIMIT LABEL Do not exceed 10 kg (22 lb) .</p>
 <p>≤ 1.5kg (3.0 lb)</p>	<p>CARGO LIMIT LABEL Do not exceed 1.5 kg (3.0 lb) .</p>